

Easy to use

With Chip Card

If you use a chip card, the programme stored on it will run automatically. Please insert the card into the top of the control panel and press the start button.

Without a Chip Card

Please enter the desired massage and press the Start button. You can alter the massage type, the massage area, the massage speed, the water pressure and the body size at any time.

1 Start / Stop

Press »Start/ Stop« briefly in order to pause the programme. Press »Start/ Stop« again to resume the programme. Press and hold »Start/ Stop« for three seconds to end the programme.

2 Circular massage

For the circular massage, the massage nozzles move in a circle on the bed surface.

3 Parallel stroke massage

For the parallel stroke massage, the massage nozzles move back and forth along the length of the body. The nozzles are offset from the outside to the inside.

4 Parallel massage

For the parallel massage, both massage nozzles move in the same direction, in arc-shaped movements to the left and to the right on the bed surface.

5 Mirror image massage

For the mirror image massage, the two massage nozzles move in opposite directions, in arc-shaped movements to the left and to the right on the bed surface.

6 Programme selection

Press the programme button and use »Plus« and »Minus« to select the corresponding programme. Three perfectly calibrated programmes are available:

1. LUXURY MASSAGE
2. BACK STABILIZATION
3. ANTI-STRESS

7 Point massage

The massage nozzles move back and forth over a short distance. Select »Whole body massage«, wait until the nozzles have reached the desired body area and then press »Point massage«.

8 Section massage

The massage nozzles move in an area of approx. 20 cm. Select »Whole body massage«, wait until the nozzles have reached the desired body area and then press »Section massage«.

9 Whole body massage

For the whole body massage, the massage nozzles move along the entire bed.

10 Upper body massage

For the upper body massage, the massage nozzles only move over the top half of the bed.

11 Lower body massage

For the lower body massage, the massage nozzles only move over the lower half of the bed.

12 Lumbar area massage

The massage nozzles only move in the lumbar region.

13 Neck/shoulder massage

The massage nozzles only move in the neck and shoulder area.

14 Water pressure

If necessary, you can adjust the water pressure using the »Plus« and »Minus« buttons. First press the water pressure icon and then »Plus« or »Minus« accordingly.

15 Speed

If necessary, you can change the speed of the massage. First press the speed button and then »Plus« or »Minus« to set the desired speed.

16 Body size


The massage area can be flexibly adjusted to match your body size. First press the back length icon and then »Plus« or »Minus« accordingly.

17 Massage time

Before starting the massage you can set the massage time by pressing this button and then »Plus« or »Minus« accordingly.

18 Chip card slot

Please insert the programme or payment chip card into the top of the control panel and press the Start button.

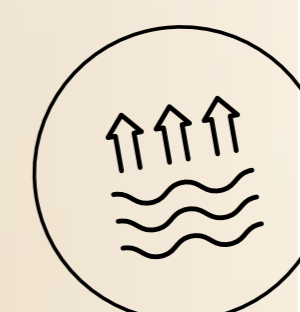

Note:

Please remove all sharp objects from your pockets before starting the massage, as these can damage the lying surface. For hygienic purposes, you should also remove your shoes before the massage. **Only lie down on the surface or get up when the massage jets are at a standstill.**

